

Walker Directional 418


Installation Instructions

Part # = 3005-92

THE WALKER DIRECTIONAL 418 PROJECTS AN INVISIBLE BEAM UP TO 25 FEET ACROSS THE AREA YOU WISH TO BE COUNTED. THE INWARD AND OUTGOING COUNTS CAN BE VIEWED ON A COMPUTER USING THE OPTIONAL COMPUCOUNT DATA MANAGER.

CONTROLS AND FUNCTIONS

- (1) *SMART SWITCH* – PERFORMS COUNTER FUNCTIONS WHEN DEPRESSED
- (2) *SIGNAL PORT* – MUST BE FACING EACH OTHER TO CREATE BEAM
- (3) *MOUNTING FLANGE* – SECURES COUNTER TO SURFACE
- (4) *RECEIVER COUNTER LED* – BLINKS WHEN IN ALIGNMENT

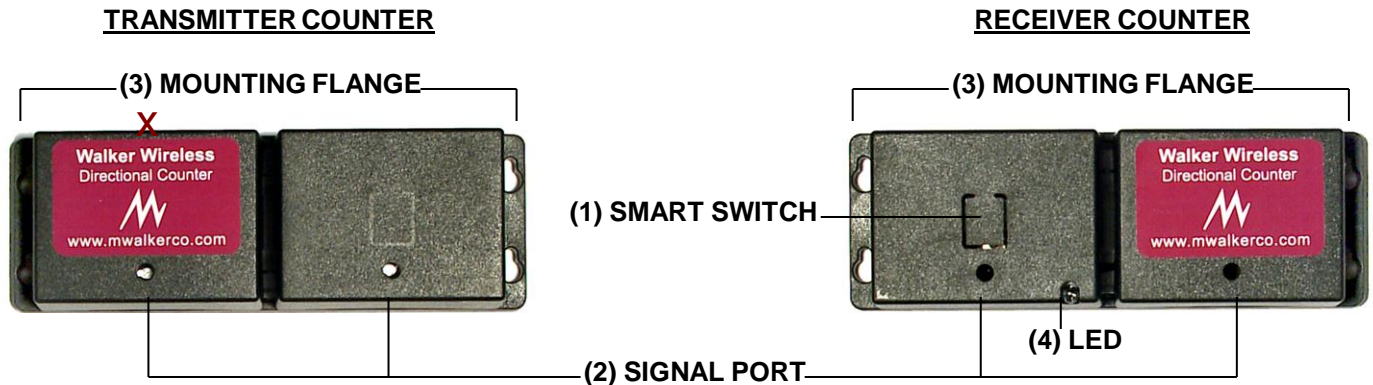

THE RECEIVER AND TRANSMITTER ARE SHIPPED IN THE INACTIVE MODE TO CONSERVE BATTERY LIFE AND ELIMINATE SIGNAL DURING SHIPMENT. TO ACTIVATE THE RECEIVER, DEPRESS AND HOLD THE SMART SWITCH (1) UNTIL THE LED (4) GOES OUT, THEN QUICKLY RELEASE. TO ACTIVATE THE TRANSMITTER, PUSH DOWN ON THE TOP OF THE CASE AS INDICATED BY THE RED X IN THE PICTURE ABOVE UNTIL THE LED GOES OUT.

FOR PRELIMINARY PROOF OF OPERATION, PLACE THE COUNTERS ON A TABLE-TOP SEVERAL FEET APART AND INTERRUPT THE INVISIBLE BEAM WITH YOUR HAND. IF THE RECEIVER COUNTER LED (4) BLINKS, IT IS WORKING. ADD THE SENSOR TO THE COMPUCOUNT (SEE THE COMPUCOUNT MANUAL) BEFORE PHYSICALLY INSTALLING THE COUNTER.

1. FOR INSTALLATION, THE COUNTERS SHOULD BE PLACED FACING EACH OTHER, WITH NO BEAMPATH OBSTRUCTIONS, APPROXIMATELY 35 INCHES HIGH FOR COUNTING BOTH ADULTS AND CHILDREN, AND 55 INCHES HIGH FOR COUNTING ADULTS ONLY.
2. INSTALL THE TRANSMITTER COUNTER FIRST, USING THE MOUNTING FLANGE (3). BEFORE PERMANENT INSTALLATION OF THE RECEIVER COUNTER, POSITION IT ON THE WALL OPPOSITE THE TRANSMITTER COUNTER AND PERFORM THE BLINK TEST AGAIN, AS STATED ABOVE. IF THE TEST IS SUCCESSFUL, PROCEED TO PERMANENT INSTALLATION.

Walker Directional 418

Battery Installation

Part # = 3005-92

BATTERY REPLACEMENT

TO ENSURE PROPER FUNCTION, BATTERIES MUST BE CHANGED AT RECOMMENDED INTERVALS. TO REPLACE THE BATTERIES IN EITHER COUNTER, HOLD THE SIDES OF COVERS AND SQUEEZE TO RELEASE THE COVERS. REMOVE ALL COVERS FROM THE BACKPLATE, REMOVE THE OLD BATTERIES, AND REPLACE WITH NEW 3.6 VOLT AA LITHIUM BATTERIES. DO NOT ATTEMPT TO REPLACE WITH 1.5 VOLT AA BATTERIES.

THE TRANSMITTER COUNTER HAS 4 BATTERIES AND THE RECEIVER COUNTER HAS 3 BATTERIES.

INACTIVE MODE

SHOULD YOU EVER NEED TO PLACE THE COUNTER RECEIVER IN THE INACTIVE MODE, DEPRESS THE SMART SWITCH (1) FOR MORE THAN TEN SECONDS.

SHOULD YOU EVER NEED TO PLACE THE COUNTER TRANSMITTER IN THE INACTIVE MODE, DEPRESS THE CENTER OF THE CASE (X) FOR MORE THAN TEN SECONDS.